
Power and Temperature Control on a 90nm Itanium[®] Family Processor

Jim Ignowski, Richard McGowen, Chris Poirier, Chris Bostak, Sam Naffziger Intel Corporation, Fort Collins, CO

Motivation

- Maximize performance per Watt
- Latest Itanium II (130nm) consumes 130 Watts
 - Single core, 9MB L3 Cache
- Montecito (90nm) consumes 100 Watts
 - Dual core, 24MB L3 Cache
- Simple port would be well over 200 Watts
 - Need something more than low power circuit techniques to address power problem

Take Advantage of P ∝ V²F

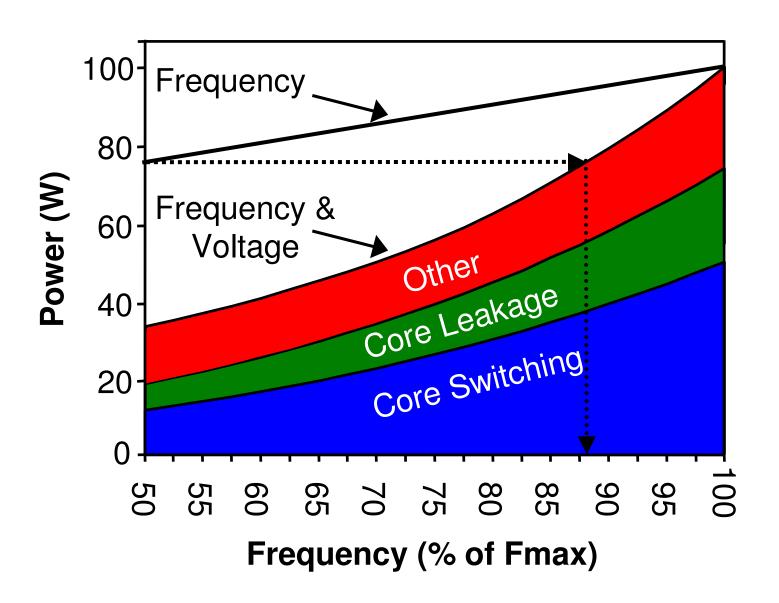


10s of μs

Voltage Control


Frequency Control

100s of ps

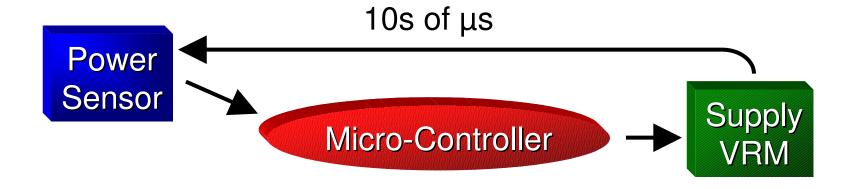


Frequency Control

100s of ps

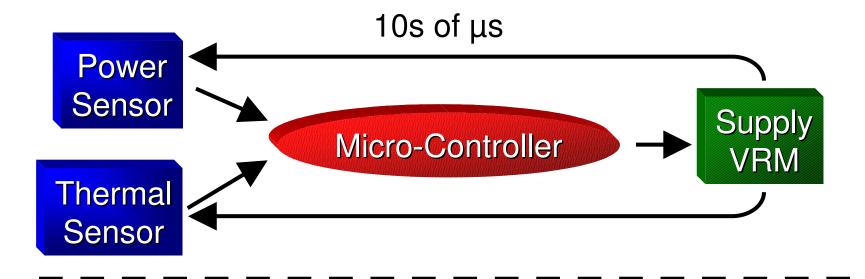


Frequency Control 100s of ps

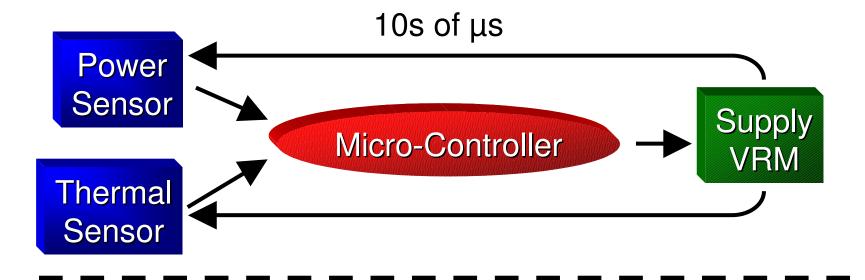




100s of ps

Measuring Power

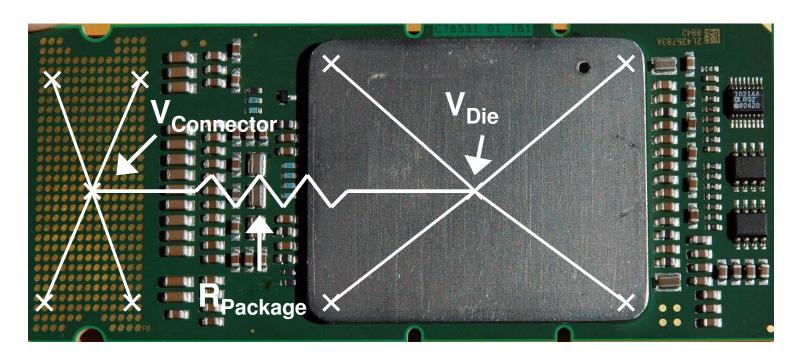

- Use package resistance to measure power
- Avoids burning extra power in measurement
- Portable, self-contained solution
 - No dependence on external power supply


Power Control System

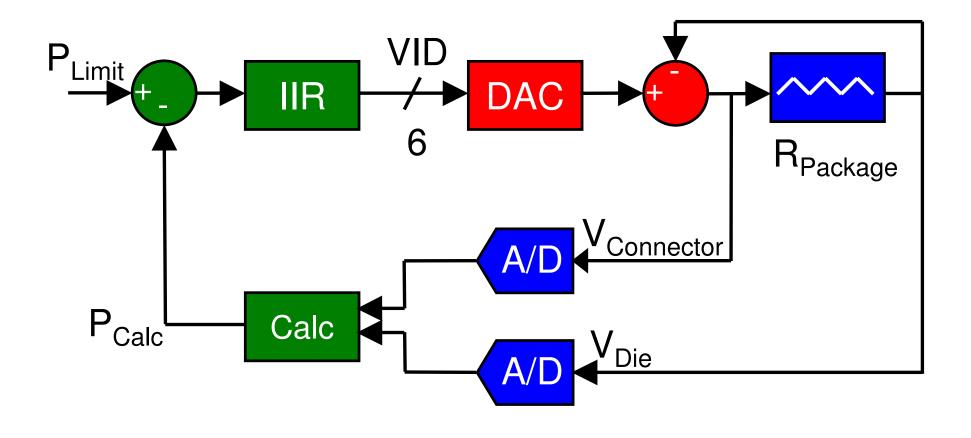

Micro-Controller Power Supply

Package/Die


System Architecture – Power Measurement

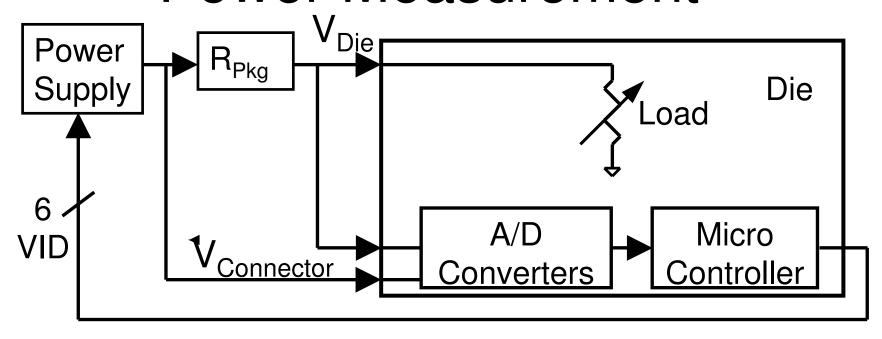

 Measure voltages at both sides of the package to determine current and compute power (8µs sample period)


$$Power = V_{Die}I_{Die} = V_{Die} \frac{\left(V_{Connector} - V_{Die}\right)}{R_{Package}}$$

Voltage Measurement

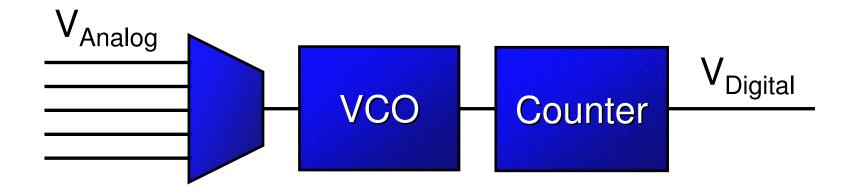


- By using an analog mux, we can reuse the same VCO to measure voltages from multiple sources
 - On die voltmeter
- High speed counter, >>10GHz for ~100μV measurement granularity
- 8µs counting interval for filtering and resolution 11

VCO Detail

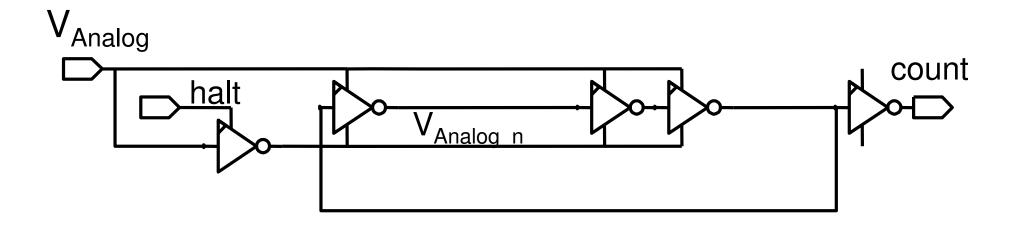


- Short loop for high speed
- Analog "inverter": bias circuit for complementary control signal, also starts/stops oscillation
- Performs averaging function by running at over 10GHz for 8µS

VCO Detail— Delay Element

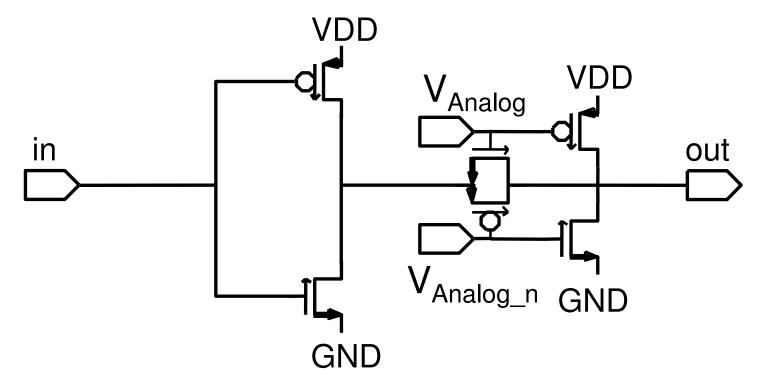


- Modulate output current via series output resistance combined with controlled drive fight
 - Large input voltage range with very linear response

Measuring Temperature

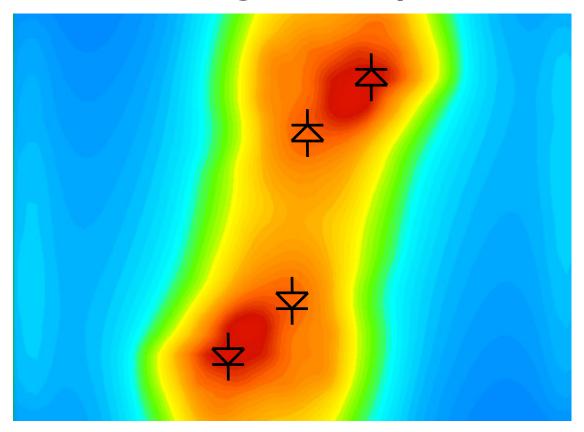

- Two thermal sensors per core
 - Mux thermal diodes into VCOs to measure temperature

System Architecture – Temperature Measurement

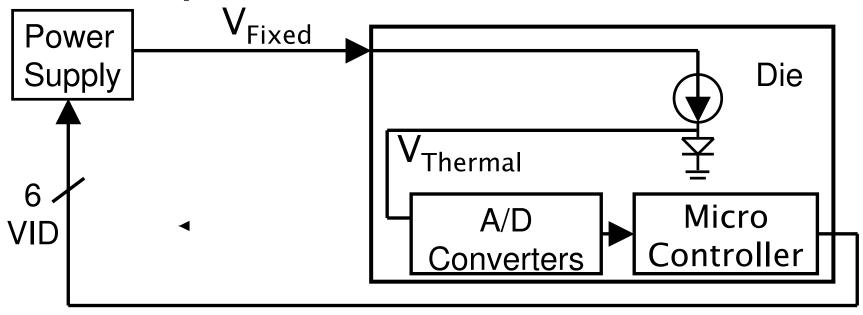


- Calibrate the voltage drop at test to T_J target (90C)
- Use the known -1.7mV per degree C temperature coefficient to calculate die temperature
- Measure the voltage drop across the diodes every 20ms

Sources of Error and Inaccuracy

- R_{Package} variation with manufacturing process
- R_{Package} variation with temperature
- <25mV DC voltage drop across package
 - 1% accuracy target requires 250μV
- Noise on the measurement system supply
 - VCO designed for speed, not power supply rejection
- VCO gain and frequency variation over PVT
- Inherent inaccuracies in the reference components


Requires frequent calibration

Package Resistance Calibration

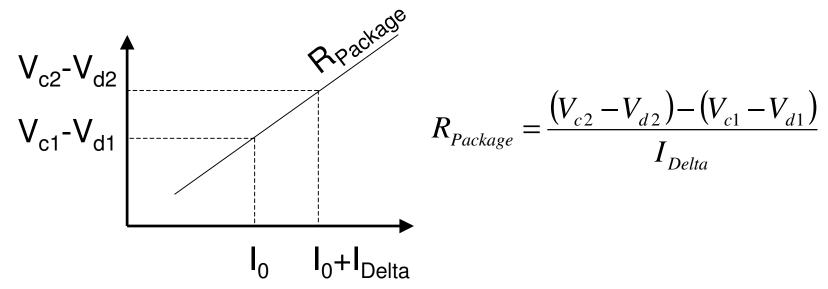

- Package resistance can be computed with two voltage measurements with processor stalled
 - Pulling quiescent current I₀
 - Pulling I₀ + a precision, on-die generated current I_{Delta}
- On-package precision R for consistent I_{Delta}
- Recalibrate every 66ms (<0.2% perf. hit)


System Overhead

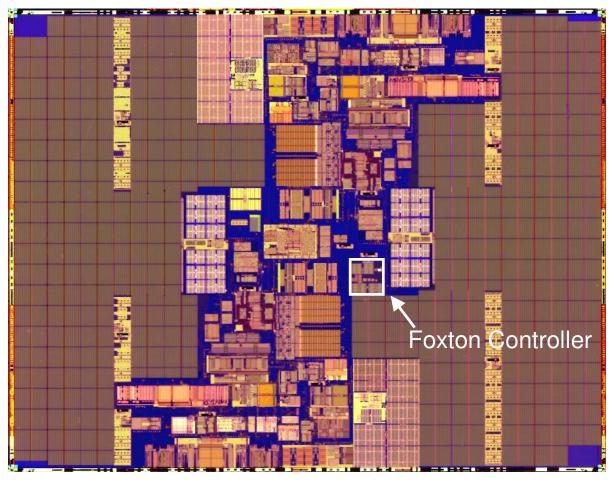

• Burns less than 0.5W, less than <0.5% area

Frequency vs. Power Limit

Core 0, Core 1, Avg Frequency vs. P_{Limit}

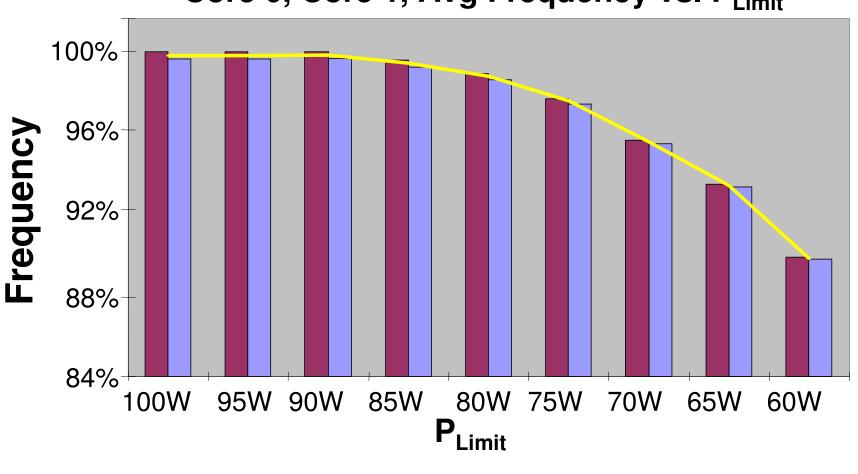

Core 0 Frequency Core 1 Frequency Avg Frequency

Measured Data



Conclusions

- Power and temperature control system using voltage and frequency modulation
 - Maximizes perf./Watt for at least a 25% efficiency gain
 - 90°C on-die temperature control with graceful throttle for improved reliability and performance
 - Programmable power limit
- Voltmeter and package resistance calibration enables
 - 3% average power measurement accuracy
 - 1°C temperature control accuracy
- Embedded on die and package, consuming <0.5W and occupying <0.5% of the die