

Study on cleaning solvents using activated alumina in PUREX process

By Y. Arai*, H. Ogino, M. Takeuchi, T. Kase and Y. Nakajima

Nuclear Fuel Cycle Engineering Lab., Japan Atomic Energy Agency, 4-33, Muramatsu, Tokai, Naka, Ibaraki 319-1194, Japan

(Received November 26, 2009; accepted in final form December 20, 2010)

*Radiolytic degradation / n-dodecane / TBP /
Solvent cleanup / Activated alumina / PUREX process*

Summary. The PUREX process is used to extract uranium and plutonium from dissolved solutions (spent nuclear fuel liquor). The extractant is 30% tributyl phosphate in *n*-dodecane, which is known to be degradable by radiation and nitric acid. Tributyl phosphate degradation products can generally be washed in alkali solutions like sodium carbonate solution; however, it is more difficult to remove *n*-dodecane degradation products using this method.

A method of cleaning solvents using activated alumina is discussed in this study. A degradation sample of 30% TBP/*n*-dodecane was prepared by irradiating (1.6 MGy) with a ⁶⁰Co gamma-source. The degradation products were then qualitatively analyzed using a gas chromatography-mass spectrometer (GC-MS). After being irradiated the solvents were cleaned with activated alumina, and a phase separation test with performed in evaluating the cleaned solvent.

This resulted in the discovery of a procedure for the removal of *n*-dodecane degradation products of dodecanol and dodecanone, with about 70% of the degradation products, and the phase separation performance could be clearly improved through use of activated alumina.

1. Introduction

The PUREX process has been widely adopted as a method of reprocessing spent nuclear fuel. In the process tributyl phosphate (TBP) is used to extract uranium and plutonium while *n*-dodecane is used as the diluent for the TBP. It is known that TBP and *n*-dodecane are degraded by radiation and nitric acid [1, 2]. The degraded products produced need to be cleaned with the degradation of TBP and *n*-dodecane. The alkali cleanup method using sodium carbonate and sodium hydroxide is commonly used to remove TBP degradation products of DBP and MBP. However, it was reported that a part of TBP degradation products can not be removed by alkali cleanup [3]. And, alcohol, ketone, and nitro paraffin derivatives are generated as the *n*-dodecane degradation products [1, 2, 4]. *N*-dodecane degradation products provide increased density and viscosity of 30% TBP/*n*-dodecane and deterioration of the phase separation behaviour [3, 5]. *N*-dodecane degradation products are the cause of the en-

trainment that takes place according to the imperfectness of the phase separation. This explain need of removing the TBP and *n*-dodecane degradation products. These degradation products accumulate in the process, and hence a cleanup method is required to remove the *n*-dodecane degradation products from 30% TBP/*n*-dodecane.

Solid adsorbents have been used as a cleanup method to remove *n*-dodecane degradation products [6–9]. J. C. Mailen studied a new solvent cleanup method that uses solid adsorbent. The results indicated that the interfacial tension and phase separation time of an ICPP solvent (~10% TBP/normal paraffin hydrocarbon) vs sodium carbonate solution could be improved with activated alumina treatment [6]. D. J. Reif reported that degraded solvents (with interfacial tension) could be improved through use of the activated alumina cleanup method [9]. S. C. Tripathi reported that activated alumina was capable of removing *n*-dodecane degradation products from 30% TBP/*n*-dodecane, and confirmed that phosphate of high molecular weight was presence in the solvent degradation products [3, 10].

The TBP and *n*-dodecane degradation products need to be removed from 30% TBP/*n*-dodecane because they can influence the extraction process used in the PUREX process, and hence solvent cleanup using activated alumina was examined in this study. The efficiency of cleaning the degradation solvent using activated alumina was confirmed through gas chromatograph analysis and phase separation tests.

2. Experimental

2.1 Irradiation

30% TBP/*n*-dodecane was contacted with 3 M HNO₃, being the assumed actual process. The degraded solvent was

Table 1. GC-MS analysis conditions.

Detector	Mass spectrometer (MS)
Column	TC-FFAP
Column temperature	60 °C
Method of sample injection	Split method (1/100)
Sample injection temperature	180 °C
Carrier gas	He (100 ml/min)
Amount of sample injected	0.2 µl or less

* Author for correspondence (E-mail: arai.yoichi@jaea.go.jp).

then prepared by irradiating with a ^{60}Co gamma-source. The irradiation dose was 1.6 MGy (dose rate: 19 kGy/h). The irradiated solvent was then analyzed with a Gas Chromatograph Mass Spectrometer (GC-MS). The solvent degradation products were identified using the GC-MS analysis results and the data base. The analysis conditions are provided in Table 1.

2.2 Solvent cleanup procedure

A 20 ml irradiated 30% TBP/*n*-dodecane sample was added to a column that had been filled with 20 g of activated alumina. It maintained it in the column until foam was put down enough (5 h). The test conditions of the solvent cleanup are provided in Table 2. Two kinds of activated alumina were used in this experiment, namely KHD-24 and NKHO-24, which had been made by Sumitomo Chemical Co. Ltd. The peak of the distribution of the pore volume of KHD-24 is about 0.001 μm and NKHO-24 is about 0.2 μm and 0.005 μm .

After being treated with the activated alumina the sample solvents were analyzed through gas chromatography using a flame ionization detector (GC-FID). The solvent degradation products were evaluated in this analysis. The analysis conditions of the GC-FID are provided in Table 3.

2.3 Phase separation procedure

Phase separation tests were conducted by shaking the phases in a separation funnel with the phase separation time being measured as the time it took for the visible globules of the dispersed phase to disappear from the interface. The test conditions of the phase separation test are shown as follows. The 3 M HNO_3 was used for the aqueous phase. Unirradiated 30% TBP/*n*-dodecane and irradiated 30% TBP/*n*-dodecane (before solvent cleanup test, after solvent cleanup test) were used for the organic phase. These solutions were added to separating funnel, and amount of solutions were 5 ml. These solutions were shaking for 3 min.

Table 2. Test conditions of solvent cleanup.

Activated alumina	NKHO-24, KHD-24
Amount of activated alumina	20 g
Sample solvent	Irradiated 30% TBP/ <i>n</i> -dodecane
Amount of sample solvent	20 ml
Test time	5 h
Temperature	Room temperature

Table 3. GC-FID analysis conditions.

Detector	Flame ionization detector (FID)
Column	TC-FFAP
Column temperature	60 °C
Method of sample injection	Split method (1/100)
Sample injection temperature	200 °C
Carrier gas	He (100 ml/min)
Amount of sample injection	0.5 μl

3. Results and discussion

3.1 Solvent degradation products

The results of the GC-MS are given in Fig. 1 (unirradiated 30% TBP/*n*-dodecane), Fig. 2 (irradiated 30% TBP/*n*-dodecane), and Table 4. The main TBP degradation product was butanol, and *n*-dodecane degradation products were alkanes (hexane, heptane, octane, *etc.*), alcohol (dodecanol and long-chain alcohols) and ketone (dodecanone). The mass spectrum of the nitro group was detected at retention time of about 27 min. D. J. Reif reported the probable mechanism that TBP and *n*-dodecane are bonded nitro group [3, 4, 10]. The identified solvent degradation products were similar to the results of previous analysis [2, 4]. It was assumed that the peak of DBP detected at 60% of the TBP's retention time [10]. However, the peak was diverted to dodecanone and a minute peak, DBP was not able to be assigned in this analysis.

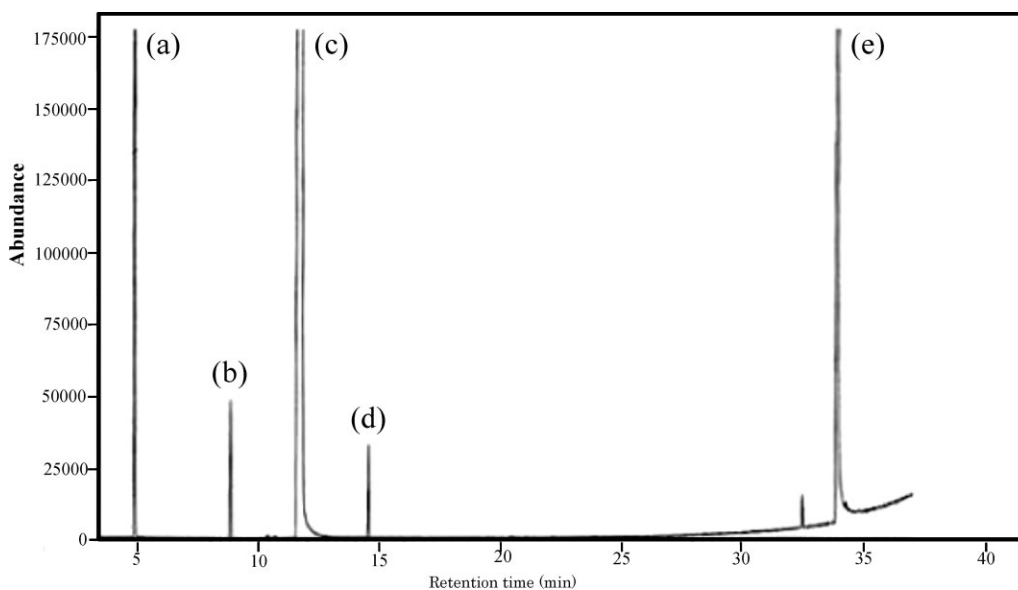


Fig. 1. Analytical results of GC-MS on 30% TBP/*n*-dodecane (Not irradiated). (a) is acetone, (b) is undecane, (c) is dodecane, (d) is tridecane and (e) is TBP. Acetone was used in the GC-MS analysis. Undecane and tridecane are reference materials used with *n*-dodecane.

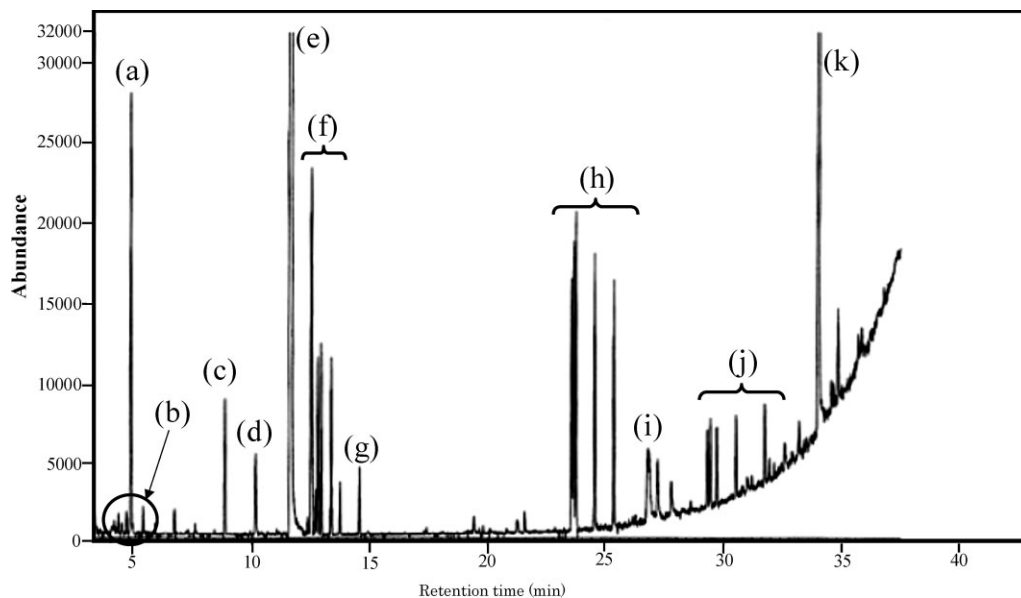


Fig. 2. Analytical result of GC-MS on irradiated 30% TBP/*n*-dodecane. (a) is acetone, (b) are ketons (hexane, heptane, octane, nonane and decane), (c) is undecane, (d) is butanol, (e) is dodecane, (f) is dodecanol, (g) is tridecane, (h) is dodecanone, (i) is a nitro compound, (j) are long chain alcohols and (k) is TBP.

Table 4. Results of phase separation time tests.

Sample (solvent)	Separation time (s)
30% TBP/ <i>n</i> -dodecane (unirradiated)	20
Irradiated 30% TBP/ <i>n</i> -dodecane (before cleanup using activated alumina)	43
Irradiated 30% TBP/ <i>n</i> -dodecane (after cleanup with activated alumina (NKHO-24))	18

The compounds that have an influence on phase separation were selected from the results of the analysis. Dodecanol was first considered from the point of view of effect on surface activity, and the influence density on phase separation. This is because phase separation deteriorates if the

density of the organic phase and the density of the aqueous phase are the same.

The solvent degradation products that influence phase separation time were presumed to be butanol, dodecanol, dodecanone, dodecanone, and nitro compounds. The densities of butanol (about 0.81 g/cm³) and dodecanone (0.82 g/cm³) are larger than *n*-dodecane (0.75 g/cm³). The density of a nitro compound is generally greater than 1 g/cm³. These degradation products can cause the density of the organic phase to increase. Dodecanol in particular is an emulsifying agent. Emulsifying agents have the effect of dispersing the aqueous and organic phases into each other.

3.2 Removal of solvent degradation products

The GC-FID results are provided in Figs. 3 and 4. It was observed the degradation products had decreased by as much

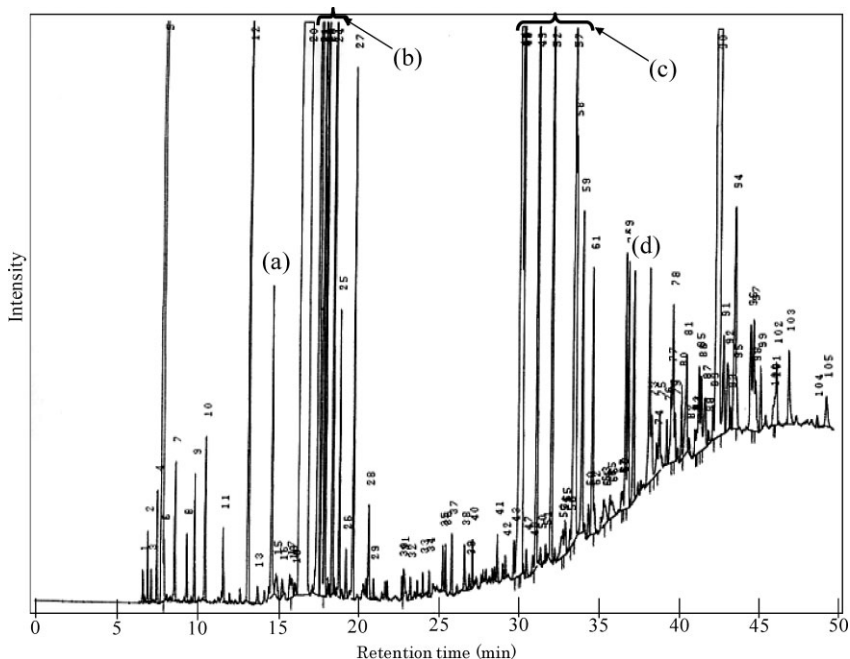


Fig. 3. Analytical result of GC-FID on irradiated 30% TBP/*n*-dodecane. (a) is butanol, (b) is dodecanol, (c) is dodecanone, (d) is nitro compound.

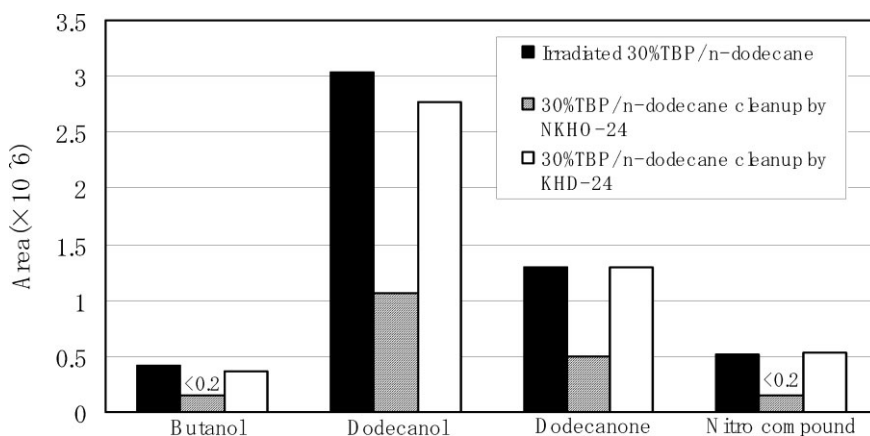


Fig. 4. Results of analysis on 30% TBP/*n*-dodecane after activated alumina treatment.

as 1/3, and thereby the concentrations of butanol and nitro compound had decreased to around the vicinity of less than the detectable limit value. These results revealed that the solvent degradation products that can influence phase separation were removed through the activated alumina cleanup.

It is known that activated alumina generally preferentially adsorbs polar molecules. The solvent degradation products that influence phase separation are compounds with polarity and hence it can be presumed that the degradation products were easily adsorbed by the activated alumina.

Moreover, the observation was made that the removal of the solvent degradation products was affected by differences in the pore size of the activated alumina. J. C. Mailen discovered that macroporous activated alumina most effectively regenerated solvents [8]. The results of these tests lead to the consideration that large pore size activated alumina would most effectively remove solvent degradation products from 30% TBP/*n*-dodecane. The behavior of adsorption into pores is known to differ with the size of the pore. The removal of degradation products can be expected to be improved through investigating the optimum conditions of the pore size.

3.3 Phase separation tests

The removal of solvent degradation products was evaluated with phase separation tests on 30% TBP/*n*-dodecane and 3 M HNO₃. The solvent samples included unirradiated 30% TBP/*n*-dodecane, irradiated 30% TBP/*n*-dodecane, and 30% TBP/*n*-dodecane treated with NKHO-24.

The results of the examination indicated the phase separation time of unirradiated 30% TBP/*n*-dodecane with 3 M HNO₃ to be similar irradiated 30% TBP/*n*-dodecane treated with activated alumina, and thus a satisfactory regeneration effect. The cleaning by the activated alumina proved to be a good method of removing the solvent degradation products that can affect phase separation.

4. Conclusion

The results of gas chromatography analysis revealed that activated alumina can be used to remove butanol, dodecanol, dodecanone, and nitro compounds as degradation products

of TBP and *n*-dodecane. About 70% of these degradation products were removed by the activated alumina. Moreover, phase separation with 3 M HNO₃ was improved to the same level as the unirradiated solvent. Alumina of large pore size proved to be the most effective in removing degradation products, a tendency similar to the results of J. C. Mailen's research [8].

Moreover, TBP degradation products such as DBP, MBP, *etc.* were not detected in this analysis, making it therefore necessary to clarify how these TBP degradation products affect phase separation *etc.* Basic data will need to be acquired in addition to discussing an engineering scale examination to put it to practical use.

Acknowledgment. The authors are grateful to Mr. Toshihiro Kato and Mr. Tsutomu Onose of Ascend Co. Ltd. for the experimental of solvent cleaning tests.

References

- Tallent, O. K., Mailen, J. C.: PUREX Diluent Degradation. ORNL/TM-8814 (1985).
- Ikeda, H., Suzuki, A.: Radiolysis of *n*-dodecane and its physical property change based on the dose in one pass through a reference HA column. *J. Nucl. Sci. Technol.* **35**(10), 697 (1998).
- Tripathi, S. C., Ramanujam, A.: Effect of radiation-induced physicochemical transformations on density and viscosity of 30% TBP-*n*-dodecane-HNO₃ system. *Sep. Sci. Technol.* **38**(10), 2307 (2003).
- Tripathi, S. C., Ramanujam, A.: Effects of solvent recycling on radiolytic degradation of 30% tributyl phosphate-*n*-dodecane-HNO₃ system. *Sep. Sci. Technol.* **34**(14), 2887 (1999).
- Ikeda, H., Suzuki, A.: Empirical correlations for radiolytic degradation of *n*-dodecane density, viscosity and phase separation time. *J. Nucl. Sci. Technol.* **38**(12), 1138 (2001).
- Mailen, J. C., Tallent, O. K.: Cleanup of Savannah River Plant solvent using solid sorbents. ORNL/TM-9256 (1985).
- Mailen, J. C.: Secondary Cleanup of Idaho Chemical Processing Plant Solvent. CONF-851011-9 (1985).
- Mailen, J. C., Mattingly, C. D.: PUREX Solvent Regeneration Using Macroporous, High-Sodium Activated Alumina. ORNL/TM-11393 (1992).
- Reif, D. J.: Restoring solvent for nuclear separation processes. *Sep. Sci. Technol.* **23**(12), 1285 (1988).
- Tripathi, S. C., Ramanujam, A.: Studies on the identification of harmful radiolytic products of 30% TBP-*n*-dodecane-HNO₃ by gas-liquid chromatography. II. Formation and characterization of high molecular weight organophosphates. *Sep. Sci. Technol.* **36**(13), 2863 (2001).