

The German Mouse Clinic: A Platform for Systemic Phenotype Analysis of Mouse Models

H. Fuchs^{1,6}, V. Gailus-Durner^{1,6}, T. Adler², J.A. Aguilar Pimentel³, L. Becker⁴, I. Bolle⁵, M. Brielmeier⁶, J. Calzada-Wack⁷, C. Dalke⁸, N. Ehrhardt⁹, N. Fasnacht¹⁰, B. Ferwagner¹, U. Frischmann¹⁰, W. Hans¹, S.M. Hölder¹¹, G. Hölzlwimmer⁷, M. Horsch¹, A. Javaheri³, M. Kallnik⁸, E. Kling⁴, C. Lengger¹, H. Maier¹, I. Moßbrugger⁷, C. Mörth¹², B. Naton¹, U. Nöth¹, B. Pasche¹³, C. Prehn¹, G. Przemec¹, O. Puk⁸, I. Racz¹⁴, B. Rathkolb¹², J. Rozman⁹, K. Schäble¹, R. Schreiner¹², A. Schrewe¹⁵, C. Sina¹⁶, R. Steinkamp¹, F. Thiele¹, M. Willershäuser¹, R. Zeh¹, J. Adamski^{1,24}, D.H. Busch², J. Beckers^{1,24}, H. Behrendt³, H. Daniel¹⁷, I. Esposito⁷, J. Favor¹⁸, J. Graw^{8,19}, G. Heldmaier⁹, H. Höfler⁷, B. Ivandic¹⁵, H. Katus¹⁵, M. Klingenspor²⁰, T. Klopstock⁴, A. Lengeling^{13,21}, M. Mempel³, W. Müller¹⁰, S. Neschen¹, M. Ollert³, L. Quintanilla-Martinez⁷, P. Rosenstiel¹⁶, J. Schmidt⁶, S. Schreiber¹⁶, K. Schughart²², H. Schulz⁵, E. Wolf¹², W. Wurst^{11,23}, A. Zimmer¹⁴, and M. Hrabé de Angelis^{1,24,*}

¹*Inst. of Exp. Genetics, Helmholtz Zentrum München, German Res. Center for Environ. Health, Munich/Neuherberg,* ²*Inst. for Med. Microbiology, Immunology and Hygiene, TU München, Munich,* ³*Division of Environ. Dermatology and Allergy TUM/HMGU, Dept. of Dermatology and Allergy, TU München, Biedersteiner Strasse 29, 80802 Munich,* ⁴*Dept. of Neurology, Friedrich-Baur-Institut, Ludwig-Maximilians-Universität München, Munich,* ⁵*Inst. for Inhalation Biology, Helmholtz Zentrum München, German Res. Center for Environ. Health, Munich/Neuherberg,* ⁶*Dept. of Comparative Med., Helmholtz Zentrum München, German Res. Center for Environ. Health, Munich/Neuherberg, Germany.* ⁷*Inst. of Pathology, Helmholtz Zentrum München, German Res. Center for Environ. Health, Munich/Neuherberg,* ⁸*Inst. of Devel. Genetics, Helmholtz Zentrum München, German Res. Center for Environ. Health, Munich/Neuherberg,* ⁹*Biology Faculty, Dept. of Animal Physiology, Philipps-Universität Marburg,* ¹⁰*Dept. of Exp. Immunology, Helmholtz Centre for Infection Res., Braunschweig,* ¹¹*Inst. of Devel. Genetics, Helmholtz Zentrum München, German Res. Center for Environ. Health, Munich/Neuherberg, and TU München,* ¹²*Inst. of Mol. Animal Breeding and Biotechnology, Gene Center, Ludwig Maximilians Universität München, Munich,* ¹³*JRG Infection Genetics, Helmholtz Centre for Infection Res., Braunschweig,* ¹⁴*Dept. of Psychiatry, Laboratory of Mol. Neurobiology, Univ. of Bonn,* ¹⁵*Dept. of Med. III, Div. of Cardiology, Univ. of Heidelberg,* ¹⁶*Inst. of Clinical Mol. Biology, Univ. Kiel,* ¹⁷*Technische Universität München, Lehrstuhl für Ernährungsphysiologie, Freising-Weihenstephan,* ¹⁸*Inst. of Human Genetics, Helmholtz Zentrum München, German Res. Center for Environ. Health, Munich/Neuherberg,* ¹⁹*Lehrstuhl für Entwicklungsgenetik, Technische Universität München, Freising-Weihenstephan,* ²⁰*Mol. Nutritional Med., Else Kröner-Fresenius Center, Technische Universität München, Freising-Weihenstephan,* ²¹*Roslin Inst., Univ. of Edinburgh, UK,* ²²*Dept. of Exp. Mouse Genetics, Helmholtz Centre for Infection Res., Inhoffenstr. 7, 38124 Braunschweig,* ²³*Max Planck Inst. of Psychiatry, Munich,* ²⁴*Lehrstuhl für Experimentelle Genetik, Technische Universität München, Freising-Weihenstephan, Germany*

Abstract: The German Mouse Clinic (GMC) is a large scale phenotyping center where mouse mutant lines are analyzed in a standardized and comprehensive way. The result is an almost complete picture of the phenotype of a mouse mutant line – a systemic view. At the GMC, expert scientists from various fields of mouse research work in close cooperation with clinicians side by side at one location. The phenotype screens comprise the following areas: allergy, behavior, clinical chemistry, cardiovascular analyses, dysmorphology, bone and cartilage, energy metabolism, eye and vision, host-pathogen interactions, immunology, lung function, molecular phenotyping, neurology, nociception, steroid metabolism, and pathology. The German Mouse Clinic is an open access platform that offers a collaboration-based phenotyping to the scientific community (www.mouseclinic.de). More than 80 mutant lines have been analyzed in a primary screen for 320 parameters, and for 95% of the mutant lines we have found new or additional phenotypes that were not associated with the mouse line before. Our data contributed to the association of mutant mouse lines to the corresponding human disease. In addition, the systemic phenotype analysis accounts for pleiotropic gene functions and refines previous phenotypic characterizations. This is an important basis for the analysis of underlying disease mechanisms. We are currently setting up a platform that will include environmental challenge tests to decipher genome–environmental interactions in the areas nutrition, exercise, air, stress and infection with different standardized experiments. This will help us to identify genetic predispositions as susceptibility factors for environmental influences.

INTRODUCTION

Model organisms, especially the mouse, have proven to be important tools to learn more about gene functions. There are many mouse mutant lines (MMLs) available, however

majority of them lacks comprehensive phenotypic characterization [1, 2]. Due to pleiotropic effects, one gene may have different functions in different organ systems. Thus, MMLs have to be systematically and comprehensively phenotyped in a standardized way to exploit the knowledge, which otherwise might remain undiscovered. To overcome this “phenotyping gap”, the German Mouse Clinic [3, www.mouseclinic.de] works as an open access phenotyping platform. The goals of the GMC are:

*Address correspondence to this author at the Institute of Experimental Genetics, Helmholtz Zentrum München, Ingolstaedter Landstrasse 1, 85764 Neuherberg (Munich), Germany; Tel: #49 89 3187 3302; Fax: #49 89 3187 3500; E-mail: hhrabe@helmholtz-muenchen.de

⁶*contributed equally to the work*

- Systemic phenotype analysis of mouse mutants on the basis of a scientific collaboration
- A primary screening of more than 320 parameters in 14 different areas
- A capacity of up to 50 mouse lines per year in a primary screening
- Detailed analysis in secondary and tertiary screening

THE GERMAN MOUSE CLINIC CONSORTIUM

The German Mouse Clinic is located in Munich at the Helmholtz Zentrum München. It is operated by the Institute of Experimental Genetics (IEG) that provides a core facility, the core scientists as coordinators, IT specialists for data management, a scientific editor for writing phenotype reports and two project administrators. In addition to the core facility the IEG provides expertise in the dysmorphology, bone and cartilage, the molecular phenotyping, and the steroid metabolism screens. A screen for diabetes research will be implemented. Specialized mouse phenotyping know-how for behavior, eye development and vision, lung function and pathology is contributed by the Institutes of Developmental Genetics, Human Genetics, Inhalation Biology and Pathology from the Helmholtz Zentrum München. Furthermore, the universities of Munich (Technische Universität and Ludwig-Maximilians Universität) closely collaborate with the GMC and provide the screens for allergy, clinical chemistry, immunology and neurology. The fields of cardiovascular function, metabolism and nociception are covered by collaborating groups from the University of Heidelberg, University of Marburg, and University of Bonn, respectively that run “satellite-labs” within the GMC. A secondary screen for host-pathogen-interactions is contributed by the HZI in Braunschweig. Additional partners from the University of Kiel and the TU München joined the consortium within our challenge platforms.

HOUSING CONDITIONS AND HYGIENE MANAGEMENT

Mice are kept in individually ventilated cages (IVCs) under standardized housing conditions at a temperature of 22–24°C, humidity of 50%–60% with 20 air exchanges per hour and a 12/12-hour light/dark cycle. Wood shavings serve as bedding. Mice are fed a standardized mouse diet (1314, Altromin) and are provided with drinking water (0.2 µl filtered tap water) *ad libitum*. At the GMC every week mice from a different collaboration partner arrive for phenotypic characterization, all of which might represent a different health status. To meet this hygienic challenge a hygiene management concept has been developed to prevent horizontal pathogen transfer [4]. Prior to the transportation into the GMC-facility, a health certificate must be delivered and be evaluated by the veterinarians from the Helmholtz Zentrum München. The GMC is fully equipped with IVC cages and Class II changing stations. The hygiene concept of the GMC comprises standard operating procedures (SOPs) for all operations. Regular health monitoring is carried out by on-site examination of sentinel mice by certified laboratories following FELASA recommendations (<http://www.felasa.eu/recommendations.htm>).

PRIMARY PHENOTYPIC CHARACTERIZATION (PRIMARY SCREEN)

An innovative workflow was established, allowing a series of non-invasive tests on the same cohort of animals without major interferences between individual examinations. In a first version of the workflow the mice were phenotyped by a single passage of a cohort of 30 mutant mice that were compared to the same number of age- and sex-matched littermate control animals.

Since the start of the European Mouse Disease Clinic (EUMODIC, www.eumodic.org) a new workflow was set up in collaboration with other European mouse clinics. This new European workflow (EMPreSSslim) aims at the improvement of comparability of phenotyping data all across Europe. We adapted our phenotyping procedures to the jointly approved European standard, and complemented this program with additional tests from the former workflow that are not represented by EMPreSSslim. The change of the workflow also enabled us to double our capacity from 25 to 50 MMLs per year.

For a complete primary screen 80 animals (20 mutant males, 20 mutant females, 20 male controls and 20 female controls) are required. The mice are analyzed comprehensively for key parameters by a passage in two pipelines through the modules of the GMC. Using only non-invasive tests approximately 320 parameters can be measured.

A cohort of ten animals per sex and genotype is analyzed in the first pipeline of experiments that comprises dysmorphology, blood pressure, calorimetry, intraperitoneal glucose tolerance test, X-ray analysis, bone densitometry, axial eye length measurement, lung function and expression profiling. In the second pipeline of experiments (also ten animals per sex and genotype), a series of behavioral and neurological tests (open field, modified SHIRPA, grip strength, rotarod, acoustic startle and pre-pulse inhibition as well as hot plate test), examination of the eyes and vision (ophthalmoscope, slit lamp analysis) are carried out and blood based parameters from the immunology, allergy, clinical-chemical, cardiovascular and steroid screens are determined. This group of animals is tested on request for ECG or echocardiography. Finally, the mice from pipeline two are analyzed in the pathology screen (Fig. 1).

A detailed overview on the analyzed parameter-sets and the used techniques in the primary screen is shown in Table 1a. The group sizes and the resulting statistical power of the analysis have been calculated for the different experiments (e.g. [5]).

After the completion of the primary screen, the data is evaluated and analyzed. The interpretation of the results is done by expert scientists derived from the different research areas covered in the screens based on a comparison with reference data obtained from literature and own baseline data. The complete result is discussed together with the mouse providers in a presentation session. In many cases the cross-view of the data from different screens allowed insights into subtle phenotypic alterations of scientific relevance that otherwise might remain unknown. Further analysis in secondary and tertiary screens as well as possibilities

Table 1a. Screens and Technology Used in the Primary Screen

Screen	Parameter Set	Technique	Remarks
Dysmorphology, Bone and Cartilage	analysis of body, skeleton, bone and cartilage	morphological observation, bone densitometry, X-ray	for more detailed information see also [6, 7]
Behavior	exploratory and anxiety-related behavior, acoustic sensorimotor gating	open field, acoustic startle & PPI	for more detailed information see also [8]
Neurology	assessment of muscle, spinocerebellar, sensory, and autonomic function	modified SHIRPA protocol, grip strength, rotarod	for more detailed information see also [9]
Eye	assessment of morphological alterations of the eye and vision	funduscopy laser interference biometry slit lamp biomicroscopy, optokinetic drum	for more detailed information see also [10-12]
Clinical Chemistry and Hematology	determination of clinical-chemical and hematological parameters in blood and assessment of glucose tolerance	blood autoanalyzer, ABC-animal blood counter, intraperitoneal glucose tolerance test (IpGTT) using the Accu-Chek Aviva glucose analyzer	for more detailed information see also [13]
Immunology	analysis of peripheral blood samples for immunological parameters	flow cytometry, Multiplex Bead Array	for more detailed information see also [14]
Allergy	analysis of total plasma IgE	ELISA	for more detailed information see also [15]
Steroid Metabolism	plasma testosterone and DHEA	ELISA	
Nociception	pain response	hot plate assay	for more detailed information see also [16]
Cardiovascular	assessment of functional and blood based cardio-vascular parameters	non-invasive tail-cuff blood pressure measurement, ANP, on demand: surface limb ECG, echocardiography	for more detailed information see also [17, 18]
Lung Function	assessment of alterations in spontaneous breathing patterns	whole body plethysmography	for more detailed information see also [19]
Molecular Phenotyping	RNA expression profiling	DNA-chip technology	for more detailed information see also [20]
Energy Metabolism	measurement of altered body weight regulation, body temperature and energy balance	indirect calorimetry	for more detailed information see also [5]
Pathology	macroscopic and microscopic analysis of more than 30 organs	standard stains (e.g. H&E, PAS, Luxol fast blue)	for more detailed information see also [21]

Pipeline 1	Screen Test	8	Dys-morphology anatomical observation	9	10	Cardio-vascular blood pressure	11	Energy Metabolism calorimetry	12	Clinical Chemistry glucose tolerance test	13	Dys-morphology bone densitometry & X-ray	14	Cardio-vascular/ Eye heart weight/ laser interference biometry	15	Lung Function/ Molecular Phenotyping plethysmography/ expression profiling	16	17
Age (weeks)		8	9	10	11	12	13	14	15	16	17							
Pipeline 2	Screen Test	adaptation period	Behaviour/ Neurology open field/ modified SHIRPA	Neurology grip strength & rotarod	Behaviour acoustic startle & PPI	Nociception hot plate	Eye ophthalmoscopy & slit lamp	Blood based Screens* blood based essays*	Cardio-vascular echocardiography	Cardio-vascular echocardiography	Blood based Screens*/ Pathology blood based essays*/ macro- and microscopic analysis							

Blood based Screens: Clinical Chemistry, Immunology, Allergy, Steroid Metabolism, Cardiovascular
blood based essays: haematology, clinical chemical analysis, FACS analysis, immune globulines, DHEA, testosterone, ANP

Fig. (1). Workflow for the primary screen.

of publishing the data is discussed during the data presentation with providers of the MML.

SECONDARY AND TERTIARY ANALYSIS

For more detailed characterization, screens of the GMC offer additional experiments in secondary and tertiary analyses. For these tests additional cohort(s) of animals are required. In Table 1b the established secondary and tertiary screens are listed.

DATA MANAGEMENT

To run a large scale phenotyping project, a professional, tailor-made database system is required. For the German

Mouse Clinic a web application called MausDB [22] has been developed in-house. The main features of MausDB are:

- Central cohort and facility management
- Scheduling of phenotyping assays
- Data import and export
- Upload of phenotyping results including metadata and files
- User-friendly graphical user interface
- Open source system (free download of manuals and source code as well as a demo system are available at <http://jupiter.helmholtz-muenchen.de>)

Table 1b. Screens and Techniques Established for Secondary and Tertiary Analysis

Screen	Technique
Dysmorphology, Bone and Cartilage	micro-CT, peripheral quantitative computer tomography, three-point-bend-test, blood based bone markers, <i>in vitro</i> analysis of osteoblasts
Behavior	modified hole board, light/dark avoidance, elevated plus-maze, social interaction, tail suspension, forced swimming, y-maze, social discrimination, object recognition, fear-potentiated startle, food-rewarded hole board, five-choice serial reaction time task
Neurology	stair case test, footprint analysis, electroencephalography (EEG)
Eye	electroretinography (ERG), histology [23]
Clinical Chemistry and Hematology	Plasma analysis for a variety of clinical-chemical parameter sets, including additional parameters which had not been measured in the primary screen to complement the evaluation of organ function; blood gas analysis, differential blood cell count; reticulocyte count, total blood clotting time; serum Insulin-like Growth Factor I; western ligand blot for Insulin-like Growth Factor Binding Proteins (IGFBPs); estimation of 24h water uptake and urine production; clinical-chemical analysis of 24h and spot urine samples for electrolyte, urea, uric acid, creatinine, glucose and protein concentrations; urinary protein electrophoresis;
Immunology	detailed flow cytometry analysis of the cellular composition of spleen, lymph nodes, bone marrow and thymus
Allergy	sensitisation with model allergens (ovalbumin, recombinant grass pollen allergen Phl p5), total IgE and allergen-specific antibody responses measurement, evaluation of allergen-specific T-cell responses
Host-Pathogen Interaction	Infection challenge with <i>Listeria monocytogenes</i> EGD, <i>Streptococcus pyogenes</i> A20, <i>Yersinia enterocolitica</i> E40, <i>Trichuris muris</i> , Influenza virus A (H1N1), survival, pathogen load and dissemination, flow cytometry, analysis of serum immunoglobulins, cytokine and chemokine response, histopathology, mucosal immunity, macrophage mediated pathogen killing and cellular activation, see also [24, 25]
Nociception	von Frey filament test, plantar test, tail-flick test, formalin test, neuropathic pain models, inflammatory hyperalgesia models
Cardiovascular	surface limb ECG, echocardiography, additional cardiovascular biomarkers as osteopontin, cardiac troponin T
Lung Function	lung function unit: lung volumes, mechanics, gas exchange, bronchial responsiveness, ventilatory response to hypercapnia/hypoxia, [26, 27]
Molecular Phenotyping	expression profiling of tissues not included in the routine set of organs of the primary screen (e.g. eye, bone, intestine, blood, spinal cord, adrenal glands, pancreas, salivary gland, bulbourethral glands, activated T-cells, yolk sac, seminal vesicles, white adipose tissue, brown adipose tissue, thyroid gland, skin and cartilage (auricle)
Energy Metabolism	ad libitum food consumption, energy content of feces (bomb calorimetry), energy assimilation, food assimilation coefficient, body weight, rectal body temperature, parameter recording under food restriction, determination of the thermoneutral zone (TNZ), basal- and resting metabolic rate (BMR and RMR respectively), heat and cold exposure, substrate utilization and energy expenditure during food restriction, telemetrical recording of body temperature and activity, chronobiological analysis: activity, body temperature and metabolism
Pathology	special stainings (histochemistry and immunohistochemistry), electron microscopy, laser-assisted microdissection, X-ray, molecular genetic analysis (e.g. array-CGH, western blot, LOH-analysis)

In addition to MausDB that stores data on the level of individual mice, another database-driven web application called CoordDB has been developed in-house to support the project management team by centrally storing information from incoming phenotyping requests and scheduling of phenotyping slots for MMLs in order to maximize phenotyping capacity utilization.

REQUEST PROCEDURE

To apply for phenotyping of a MML in the GMC a scientist should visit our website (www.mouseclinic.de) and submit a completed request form. With the submission of the form the collaboration partner provides the GMC management team with essential information needed for processing the request and scheduling the phenotyping slots. Further steps will include a test for sanitary status of the mice, a collaboration agreement, and preparation as well as scheduling of the cohort.

QUALITY MANAGEMENT IN A LARGE SCALE MOUSE PHENOTYPING PROJECT

The quality management at the GMC consists of multiple elements: Project management supported by the central database systems MausDB and CoordDB, standardized analyses via Standard Operating Procedures (SOP) that have been validated within the EUMORPHIA program, as well as quality control and continuous training of the staff members. As a member of the National Genome Research Network (NGFN), we were also supported by the workgroup quality management of the NGFN.

The GMC management team (core facility) coordinates the scientific issues, logistics and administration of the GMC. The coordination software tool CoordDB supports the GMC management team in handling the incoming requests for phenotyping and for management of the complex workflow of the primary and secondary screening. The central mouse cohort and result management system MausDB ensures full traceability of samples, documentation of all data and administration of the successful execution of phenotyping tasks.

The GMC developed a set of SOPs which cover all steps from the mouse importing and handling to phenotyping and data analysis. These SOPs are strictly followed during the whole screening process in the GMC and all procedures are documented.

The GMC is one of the major partners of the EUMODIC consortium that emerged from the EUMORPHIA program [7, www.eumorphia.org], a consortium for the selection, establishment and standardization of phenotyping protocols for mice as models for human diseases and for mouse husbandry. Cross-validation of protocols and screening procedures was performed by the different EUMORPHIA institutions.

In addition to routine experiment-specific quality control procedures, control animals of selected strains (e.g. C57BL/6J and C3HeB/FeJ) are analyzed through the standard protocol for all phenotypes at regular intervals.

A tissue archive has been established for the storage of tail and blood plasma samples taken from all mice that have been analyzed in the GMC. These samples can be used on demand for re-genotyping or re-evaluation of the sanitary status.

Regular specific training courses are held at the GMC by inviting specialists who give lectures or offer practical training (e.g. animal handling, sanitary management or security).

CONTRIBUTION TO THE EUROPEAN MOUSE DISEASE CLINIC (EUMODIC) AND OTHER EUROPEAN PROJECTS

Within the European initiative EUMORPHIA [8], we have standardized and validated our protocols and screening procedures. The GMC is one of the four large-scale phenotyping centers of the EUMODIC consortium (www.eumodic.org), which will undertake a primary phenotype assessment of up to 650 mutant mouse lines made available by the EUComm project. To enable cross-center comparisons of phenotyping results we have adapted the primary workflow to EMPReSSslim with two phenotyping pipelines. Many screens of the GMC also contribute to secondary screening activities within the EUMODIC project.

RESULTS

In total, 81 MMLs that were created with different techniques like knock outs, gene targeting, ENU mutagenesis, or by spontaneous mutations were obtained from institutes all over the world and were successfully phenotyped in the primary screen. In nearly all of the MMLs, we detected altered parameters in the mutants compared to their wild-type controls. In addition, we collected baseline data from the most commonly used inbred mouse strains.

In 95% of the 81 mutant lines that were analyzed in the primary screen we found new or additional phenotypic alterations (Fig. 2). Also, subtle changes were detected essentially in every line assessed. Secondary screens were recommended for almost every mutant line. Table 2 provides an overview of the analyzed disease models.

GENOME-ENVIRONMENTAL INTERACTIONS

To explore the complex relationship between environmental changes and genetic factors, we set up standardized challenge platforms for mouse phenotyping. By mimicking specific environmental exposures or life styles that have a strong impact on human health, we want to determine their effects on disease etiology and progression, uncovering the physiological and molecular mechanisms of genome-environment interactions. We have chosen five areas – diet, air pollution, stress, exercise and immunity (Fig. 3) – representing the major interfaces of the organism with the environment (gut, lung/skin, brain/sensory organs, muscle/bone and immune system). The challenged animals will subsequently be analyzed by appropriate standard screens of the GMC. This platform will allow us to identify genetic predispositions as susceptibility factors for environmental influences.

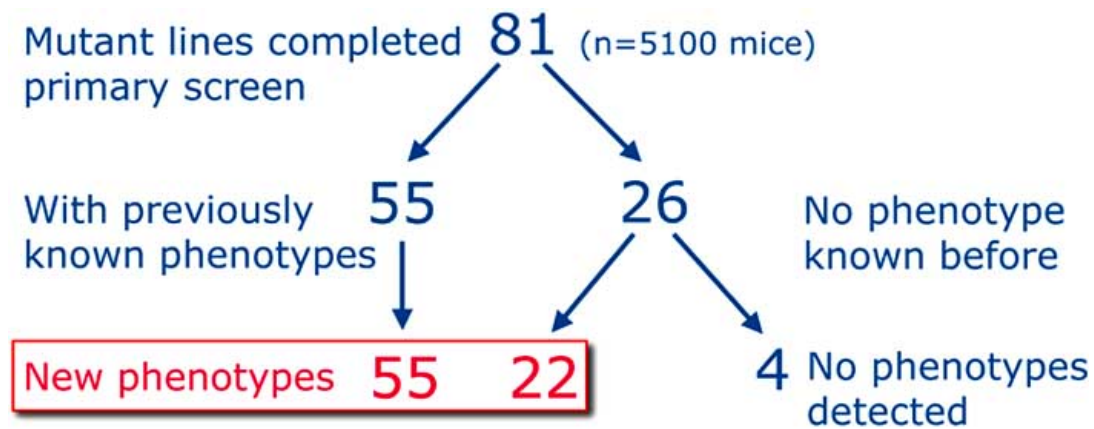


Fig. (2). Overview on the results of the first 81 mutant lines.

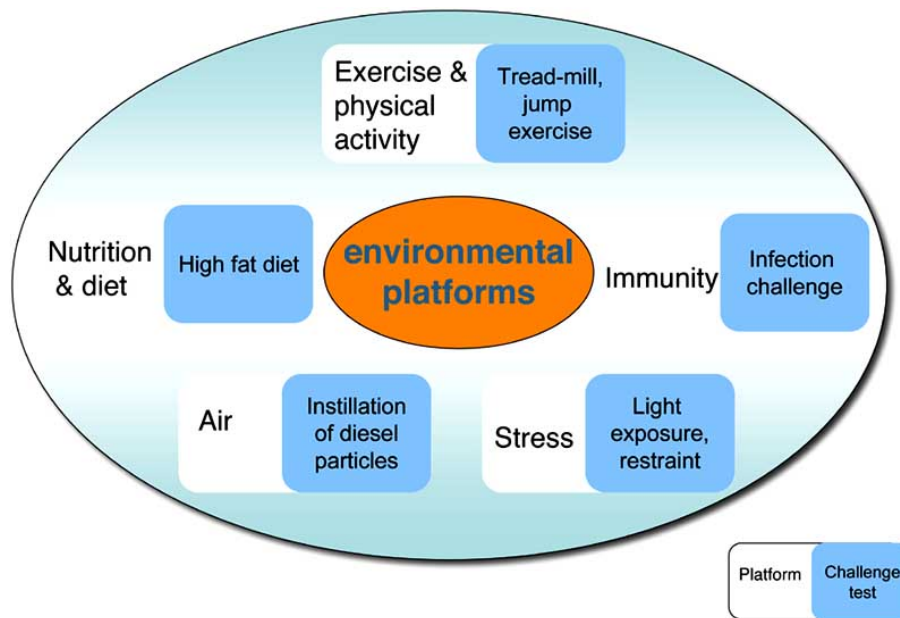


Fig. (3). Challenge platforms.

Table 2. Disease Models Analyzed

Neurological diseases / complex syndromes
Schizophrenia, depression, bipolar affective disorders, alcoholism, mental retardation, cognition deficits, inherited ataxia, tremor, progressive deafness, altered pain perception, learning and memory, developmental verbal dyspraxia, dying back oligodendrogliopathy, juvenile neuronal ceroid lipofuscinosis, Down syndrome, Mowat-Wilson syndrome, Leigh syndrome, Alzheimer's disease, Huntington's disease
Bone / cartilage / eye
Syndactyly, polydactyly, Amelogenesis imperfecta, Osteogenesis imperfecta, osteoporosis, scoliosis, acroosteolysis, inflammatory arthritis, cataract, microphthalmia, retinal degeneration, altered cornea
Other disease areas (e.g. metabolic, cardiac)
Obesity, metabolic syndrome, glycolipid storage disease, iron storage disease, Selenium deficiency syndrome, peroxisome biogenesis disorder, male infertility, gynecomastia, spontaneous progressive liver fibrosis, dystrophic cardiac calcification, polycystic ovarian syndrome, Diamond-Blackfan anemia, Bartter syndrome, Morbus Addison

META-ANALYSIS OF DATA AND DATA MINING

Comprehensive screening activities within the German Mouse Clinic provide a tremendous amount of data, which are collected in a standardized format in the GMC database system MausDB. It represents a promising resource for meta-analysis approaches and data mining exercises. As a first outcome, data of the molecular phenotyping screen helped to discover syn-expression groups of genes in different organs [20]. Other data mining exercises for the complete data-set are in progress.

CONCLUSION

The German Mouse Clinic is a large scale phenotyping center for the systemic analysis of mouse mutant lines. The GMC is a consortium of scientists with expertise in various fields of mouse research. The GMC operates in close cooperation with clinicians, and it offers a collaboration-based phenotyping of MMLs as an open access platform to the scientific community. The systemic analysis of MMLs in the GMC has proven to be a powerful tool to find new model systems for human diseases. The German Mouse Clinic can be contacted at www.mouseclinic.de.

ACKNOWLEDGEMENTS

A large team consisting of scientists, technicians and animal caretakers contributes to the success of the German Mouse Clinic. We want to thank Reinhard Seeliger, Susanne Axtner, Miriam Backs, Nicole Boche, Christine Fürmann, Tamara Halex, Sabine Holthaus, Elfi Holupirek, Nadine Kink, Claudia Kloss, Regina Kneutinger, Kerstin Kutzner, Maria Kugler, Albert Langer, Mareike Maurer, Jacqueline Müller, Elenore Samson, Sandra Schädler, Ann-Elisabeth Schwarz, Bettina Sperling, Susanne Wittich, and Claudia Zeller for expert technical help. We also want to thank the AG-QM of the NGFN for helpful discussions in the NGFN quality management meetings.

This work was supported by the German National Genome Research Network (NGFN 01GR0430, 01GR0434, 01GR0435, 01GR0436, 01GR0437, 01GR0438, 01GR0439) and EUMODIC.

REFERENCES

- [1] Auwerx, J.; Avner, P.; Baldock, R.; Ballabio, A.; Balling, R.; Barbacid, M.; Berns, A.; Bradley, A.; Brown, S.; Carmeliet, P.; Chambon, P.; Cox, R.; Davidson, D.; Davies, K.; Duboule, D.; Forejt, J.; Granucci, F.; Hastie, N.; Hrabé de Angelis, M.; Jackson, I.; Kioussis, D.; Kollias, G.; Lathrop, M.; Lendahl, U.; Malumbres, M.; von Melchner, H.; Müller, W.; Partanen, J.; Ricciardi-Castagnoli, P.; Rigby, P.; Rosen, B.; Rosenthal, N.; Skarnes, B.; Stewart, A.F.; Thornton, J.; Tocchini-Valentini, G.; Wagner, E.; Wahli, W. and Wurst, W. (2004) The European dimension for the mouse genome mutagenesis program. *Nat. Genet.*, **36**, 925-7.
- [2] Austin, C.P.; Battey, J.F.; Bradley, A.; Bucan, M.; Capocchi, M.; Collins, F.S.; Dove, W.F.; Duyk, G.; Dymecki, S.; Eppig, J.T.; Grieder, F.B.; Heintz, N.; Hicks, G.; Insel, T.R.; Joyner, A.; Koller, B.H.; Lloyd, K.C.; Magnuson, T.; Moore, M.W.; Nagy, A.; Pollock, J.D.; Roses, A.D.; Sands, A.T.; Seed, B.; Skarnes, W.C.; Snoddy, J.; Soriano, P.; Stewart, D.J.; Stewart, F.; Stillman, B.; Varmus, H.; Varticovski, L.; Verma, I.M.; Vogt, T.F.; von Melchner, H.; Witkowski, J.; Woychik, R.P.; Wurst, W.; Yancopoulos, G.D.; Young, S.G. and Zambrowicz, B. (2004) The knockout mouse project. *Nat. Genet.*, **36**, 921-4.
- [3] Gailus-Durner, V.; Fuchs, H.; Becker, L.; Bolle, I.; Brielmeier, M.; Calzada-Wack, J.; Elvert, R.; Ehrhardt, N.; Dalke, C.; Franz, T.J.; Grundner-Culemann, E.; Hammelbacher, S.; Holter, S.M.; Holzlwimmer, G.; Horsch, M.; Javaheri, A.; Kalaydjiev, S.V.; Klempt, M.; Kling, E.; Kunder, S.; Lengger, C.; Lisse, T.; Mijalski, T.; Naton, B.; Pedersen, V.; Prehn, C.; Przemeczek, G.; Rác, I.; Reinhard, C.; Reitmeier, P.; Schneider, I.; Schrewe, A.; Steinkamp, R.; Zybilla, C.; Adamski, J.; Beckers, J.; Behrendt, H.; Favor, J.; Graw, J.; Heldmaier, G.; Hofler, H.; Ivandic, B.; Katus, H.; Kirchof, P.; Klingenspor, M.; Klopstock, T.; Lengeling, A.; Muller, W.; Ohl, F.; Ollert, M.; Quintanilla-Martinez, L.; Schmidt, J.; Schulz, H.; Wolf, E.; Wurst, W.; Zimmer, A.; Busch, D.H. and Hrabé de Angelis, M. (2005) Introducing the German Mouse Clinic: open access platform for standardized phenotyping. *Nat. Methods.*, **2**(6), 403-4.
- [4] Brielmeier, M.; Fuchs, H.; Przemeczek, G.; Gailus-Durner, V.; Hrabé de Angelis, M. and Schmidt, J. The GSF – Phenotype Analysis Center (German Mouse Clinic, GMC): A Sentinel-Based Health Monitoring Concept in a Multi-User Unit for Standardized Characterization of Mouse Mutants. Proceedings of the 8th FELASA Symposium, Aachen, *Laboratory Animals Ltd.*, 2002.
- [5] Meyer, C.; Elvert, R.; Scherag, A.; Ehrhardt, N.; Gailus-Durner, V.; Fuchs, H.; Schäfer, H.; Hrabé de Angelis, M.; Heldmaier, G. and Klingenspor, M. (2007) Power matters in closing the phenotyping gap. *Naturwissenschaften*, **94**(5), 401-6.
- [6] Fuchs, H.; Schughart, K.; Wolf, E.; Balling, R. and Hrabé de Angelis, M. (2000) Screening for dysmorphological abnormalities--a powerful tool to isolate new mouse mutants. *Mamm. Genome.*, **11**(7), 528-30.
- [7] Fuchs, H.; Lisse, T.; Abe, K. and Hrabé de Angelis, M. (2006) Screening for bone and cartilage phenotypes in mice. In: Standards of Mouse Model Phenotyping. Eds.: Hrabé de Angelis M., Chambon P. and Browns S. *Wiley-VCH, Weinheim*, pp 35-86.
- [8] Brown, S.D.; Chambon, P. and Hrabé de Angelis, M. Eumorphia Consortium. (2005) EMPReSS: standardized phenotype screens for functional annotation of the mouse genome. *Nat. Genet.*, **37**(11), 1155.
- [9] Schneider, I.; Tirsch, W.S.; Faus-Kessler, T.; Becker, L.; Kling, E.; Busse, R.L.; Bender, A.; Feddersen, B.; Tritschler, J.; Fuchs, H.; Gailus-Durner, V.; Englmeier, K.H.; Hrabé de Angelis, M. and Klopstock, T. (2006) Systematic, standardized and comprehensive neurological phenotyping of inbred mice strains in the German Mouse Clinic. *J. Neurosci. Methods*, **15**, 157(1), 82-90.
- [10] Favor, J. (1983) A comparison of the dominant cataract and recessive specific-locus mutation rates induced by treatment of male mice with ethylnitrosourea. *Mutation Res.*, **110**, 367-382.
- [11] Puk, O.; Dalke, C.; Favor, J.; Hrabé de Angelis, M. and Graw, J. (2006) Variations of eye size parameters among different strains of mice. *Mamm. Genome*, **17**, 851-857.
- [12] Puk, O.; Dalke, C.; Hrabé de Angelis, M. and Graw, J. (2008) Variation of the response to the optokinetic drum among various strains of mice. *Front. Biosci.*, **13**, 6269-6275.
- [13] Klempt, M.; Rathkolb, B.; Fuchs, E.; Hrabé de Angelis, M.; Wolf, E. and Aigner, B. (2006) Genotype-specific environmental impact on the variance of blood values in inbred and F1 hybrid mice. *Mamm. Genome.*, **17**(2), 93-102.
- [14] Kalaydjiev, S.; Franz, T. and Busch, D.H. (2005) Mouse phenotyping: Immunology. In: Standards of Mouse Model Phenotyping. Eds.: Hrabé de Angelis, M.; Chambon, P. and Browns S. *Wiley-VCH, Weinheim*, pp 35-86.
- [15] Alessandrini, F.; Jakob, T.; Wolf, A.; Wolf, E.; Balling, R.; Hrabé de Angelis, M.; Ring, J. and Behrendt, H. (2001) ENU mouse mutagenesis: Generation of mouse mutants with aberrant plasma IgE levels. *Int. Arch. Allergy Immunol.*, **124**, 25-28.
- [16] Rác, I. and Zimmer, A. (2006) Animal models in nociception. In: Standards of Mouse Model Phenotyping. Eds.: Hrabé de Angelis, M.; Chambon, P. and Browns S. *Wiley-VCH, Weinheim*.
- [17] Schoensiegel, F.; Bekeredjian, R.; Schrewe, A.; Weichenhan, D.; Frey, N.; Katus, H.A.; Ivandic, B.T. (2007). Atrial natriuretic peptide and osteopontin are useful markers of cardiac disorders in mice. *Comp Med.*, **57**(6): 546-53.
- [18] Hoelter, S.M.; Dalke, C.; Kallnik, M.; Becker, L.; Horsch, M.; Schrewe, A.; Favor, J.; Klopstock, T.; Beckers, J.; Ivandic, B.; Gailus-Durner, V.; Fuchs, H.; Hrabé de Angelis, M.; Graw, J. and Wurst, W. (2008) "Sighted C3H" mice - a tool for analysing the influence of vision on mouse behaviour? *Front. Biosci.*, **13**, 5810-23.
- [19] Barco Barrantes, I.; Montero-Pedraza, A.; Guadano-Ferraz, A.; Obregon, M.J.; Martinez de Mena, R.; Gailus-Durner, V.; Fuchs, H.; Franz, T.J.; Kalaydjiev, S.; Klempt, M.; Holter, S.; Rathkolb, B.; Reinhard, C.; Morreale de Escobar, G.; Bernal, J.; Busch, D.H.; Wurst, W.; Wolf, E.; Schulz, H.; Shtrom, S.; Greiner, E.; Hrabé de Angelis, M.; Westphal, H.; Niehrs, C. (2006) Generation and characterization of dickkopf3 mutant mice. *Mol. Cell Biol.*, **26**(6), 2317-26.
- [20] Horsch, M.; Schädler, S.; Gailus-Durner, V.; Fuchs, H.; Meyer, H.; Hrabé de Angelis, M. and Beckers J (2008) Systematic gene expression profiling of mouse model series reveals coexpressed genes. *Proteomics*, **8** (6) 1248-1256.
- [21] Kunder, S.; Calzada-Wack, J.; Holzlwimmer, G.; Müller, J.; Kloss, C.; Howat, W.; Schmidt, J.; Höfler, H.; Warren, M. and Quintanilla-Martinez, L. (2007) A Comprehensive Antibody Panel for Immunohistochemical Analysis of Formalin-Fixed, Paraffin-Embedded Hematopoietic Neoplasms of Mice: Analysis of Mouse Specific and Human Antibodies and Human Antibodies Cross-Reactive with Murine Tissue. *Toxicol. Pathol.*, **35**, 366-375.
- [22] Maier, H.; Lengger, C.; Simic, B.; Fuchs, H.; Gailus-Durner, V. and Hrabé de Angelis, M. (2008) MausDB: An open source application for phenotype data and mouse colony management in large-scale mouse phenotyping projects. *BMC Bioinformatics*, **9**, 169.
- [23] Dalke, C.; Löster, J.; Fuchs, H.; Gailus-Durner, V.; Soewarto, D.; Favor, J.; Neuhäuser-Klaus, A.; Pretsch, W.; Gekeler, F.; Shinoda, K.; Zrenner, F.; Meitinger, T.; Hrabé de Angelis, M. and Graw, J. (2004) Electroretinography as a screening method for mutations causing retinal dysfunction in mice. *Invest. Ophthalmol. Vis. Sci.*, **45**, 601-609.

- [24] Schippers, A.; Mateika, S.; Prochnow, B.; Gruber, A.D.; Müller, W. and Frischmann, U. (2008) Susceptibility of four inbred mouse strains to a low-pathogenic isolate of *Yersinia enterocolitica*. *Mamm. Genome.*, **19**(4), 279-9.
- [25] Pasche, B.; Kalaydjiev, S.; Franz, T.J.; Kremmer, E.; Gailus-Durner, V.; Fuchs, H.; Hrabé de Angelis, M.; Lengeling, A. and Busch, D.H. (2005) Sex dependent susceptibility pattern to *Listeria monocytogenes* infection is mediated by differential IL-10 production. *Infect. Immun.*, **73**, 5952-5960.
- [26] Reinhard, C.; Eder, G.; Fuchs, H.; Ziesenis, A.; Heyder, J. and Schulz, H. (2002): Inbred strain variation in lung function. *Mamm. Genome.*, **13**(8), 429-437.
- [27] Reinhard, C.; Meyer, B.; Fuchs, H.; Stoeger, T.; Eder, G.; Ruschendorf, F.; Heyder, J.; Nurnberg, P.; Hrabé de Angelis, M. and Schulz, H. (2005) Genomewide linkage analysis identifies novel genetic Loci for lung function in mice. *Am. J. Respir. Crit. Care. Med.*, **171**(8), 880-8.

Received: May 05, 2008

Accepted: June 02, 2008